

# EXPORT LIMIT SETTINGS

Using a CT Clamp



Ginlong Technologies Co., Ltd.


**NOTE:** The CT clamp should be installed on the **main board** with the arrow on **CT** facing the **grid**. The CT cable should NOT be run along the AC cable, it may **cause interference**.

### SETTING UP EXPORT LIMIT USING A CT CLAMP


**STEP 1:** Press Enter on the inverter screen.




**STEP 2:** Use Up/Down keys to go to advanced settings and press Enter.

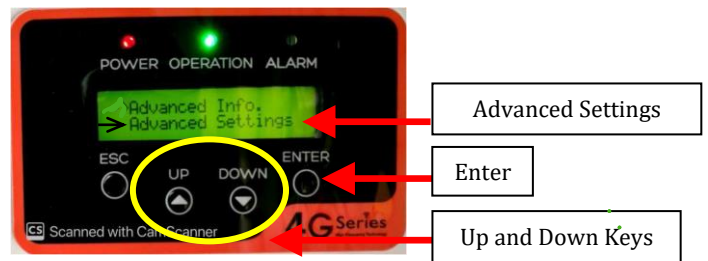


**STEP 3:** Press Down key twice and up key once, to type the password as 0010. Then press Enter.

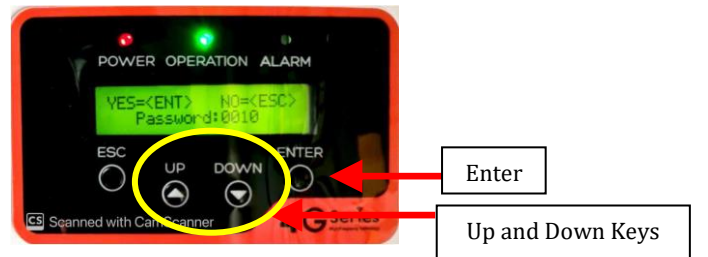

**STEP 4:** Use the up/down keys to scroll to Grid ON/ Grid OFF. Then press Enter.

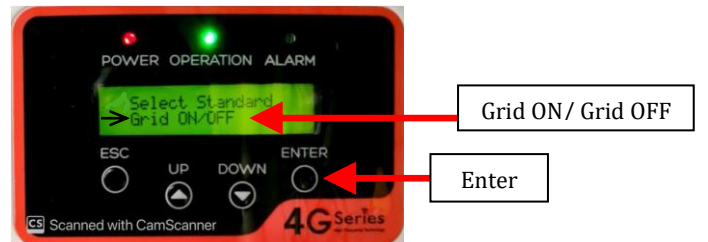

**STEP 5:** Select the Grid OFF option and press Enter. You will see the operation light turn OFF.

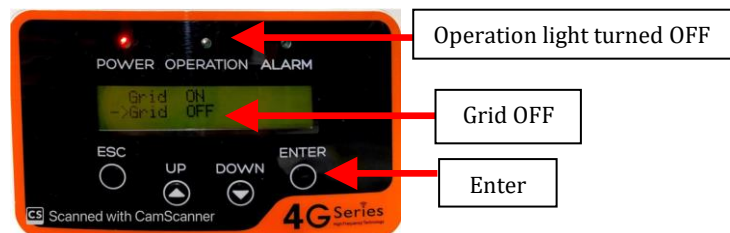

**STEP 6:** Use Up/Down key to scroll to EPM settings/ Internal EPM/ Export Power Set, whichever is available on your screen. Then press Enter.



**STEP 7:** Go to Backflow Power and press Enter.



**STEP 8:** Use the Up/Down keys to set the Backflow power according to your requirements. For Example: If your export limit is 5kW you need to set Backflow power as 5000W or +5000W. Press Enter.



**STEP 9:** Use Up/Down keys to find Mode Select. Use Up/Down keys to find 'Current Sensor'. Press Enter, to confirm the selected option. Then press "ESC" to backout.

**STEP 10:** Now turn the Grid ON in Advanced Settings.

(Go to Advanced Settings by pressing ESC thrice < Set password 0010 < Go to Grid ON/Grid OFF < Select Grid ON < Press Enter).

**STEP 11:** After the Grid option is ON, go onto EPM settings/ Internal EPM/ Export Power Set and press Enter. Choose Mode Select → Current Sensor → You will get two options when you select Current Sensor.

- Click **CT Link Test** and press Enter.  
You will see status as '*Correct*' – meaning everything is working fine.  
If not, you will see '*Error*' on the screen if the connection is not proper. Or you will see '*NG*' on the screen if the CT is installed in the wrong direction.
- **CT sample ratio**  
If you need to change the CT ratio, Select CT sample ratio and set according to your requirements (default is 3000:1)

**STEP 12:** Press ESC to exit to the main screen. The status displayed will be LYMBYEPM, which indicates you have successfully set up the export limit.

'ALL DONE'

HAVE A GOOD DAY!