


Solis S6-EA1P(3.6-6)K-L Wiring Diagram


AC Coupled Installation System Wiring diagram – S6-EA1P(3.6-6)K-L

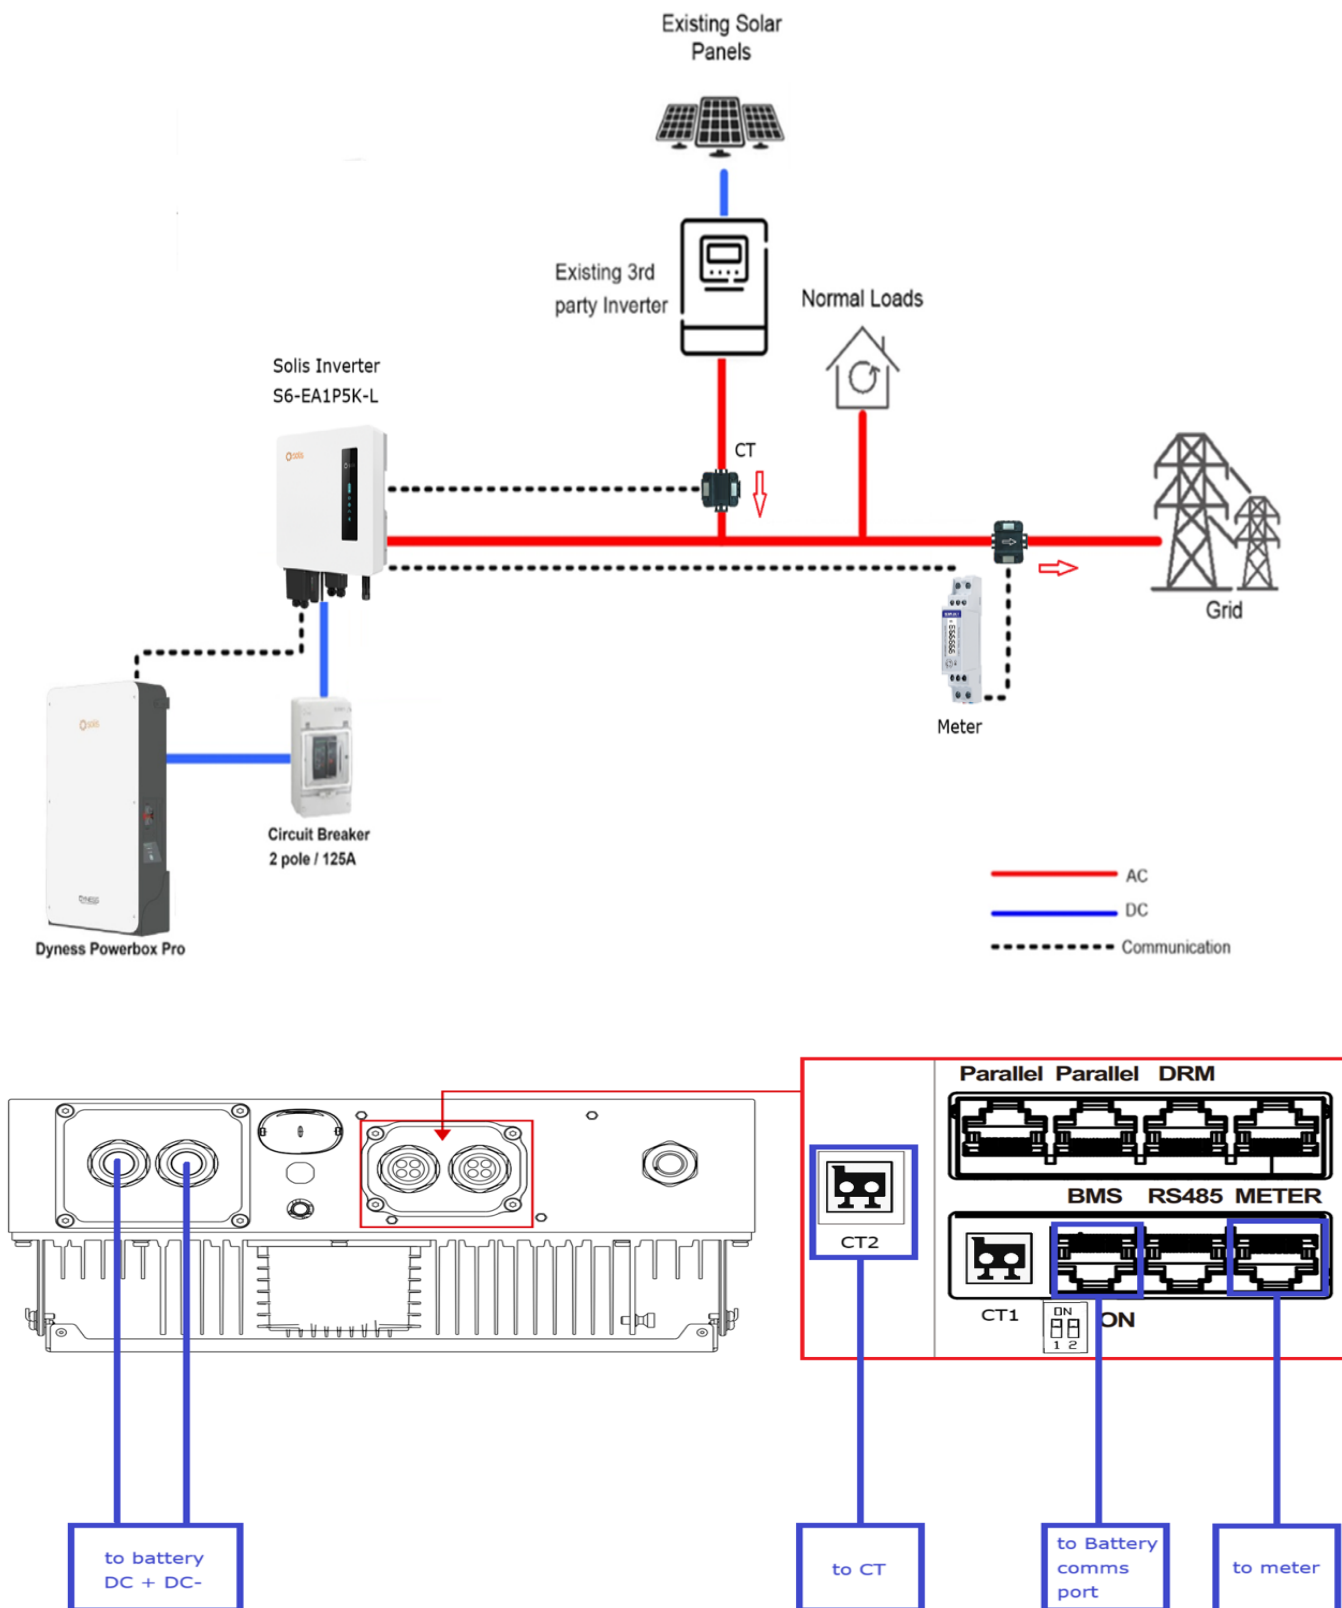

Solis S6-EA1P(3.6-6)K-L Wiring Diagram

More than one battery wiring Diagram (Solis-Dyness Battery)

The **Master battery** defaults to **DIP setting 0010**; all **Slave batteries left side board** must be set to **DIP setting 0000**.

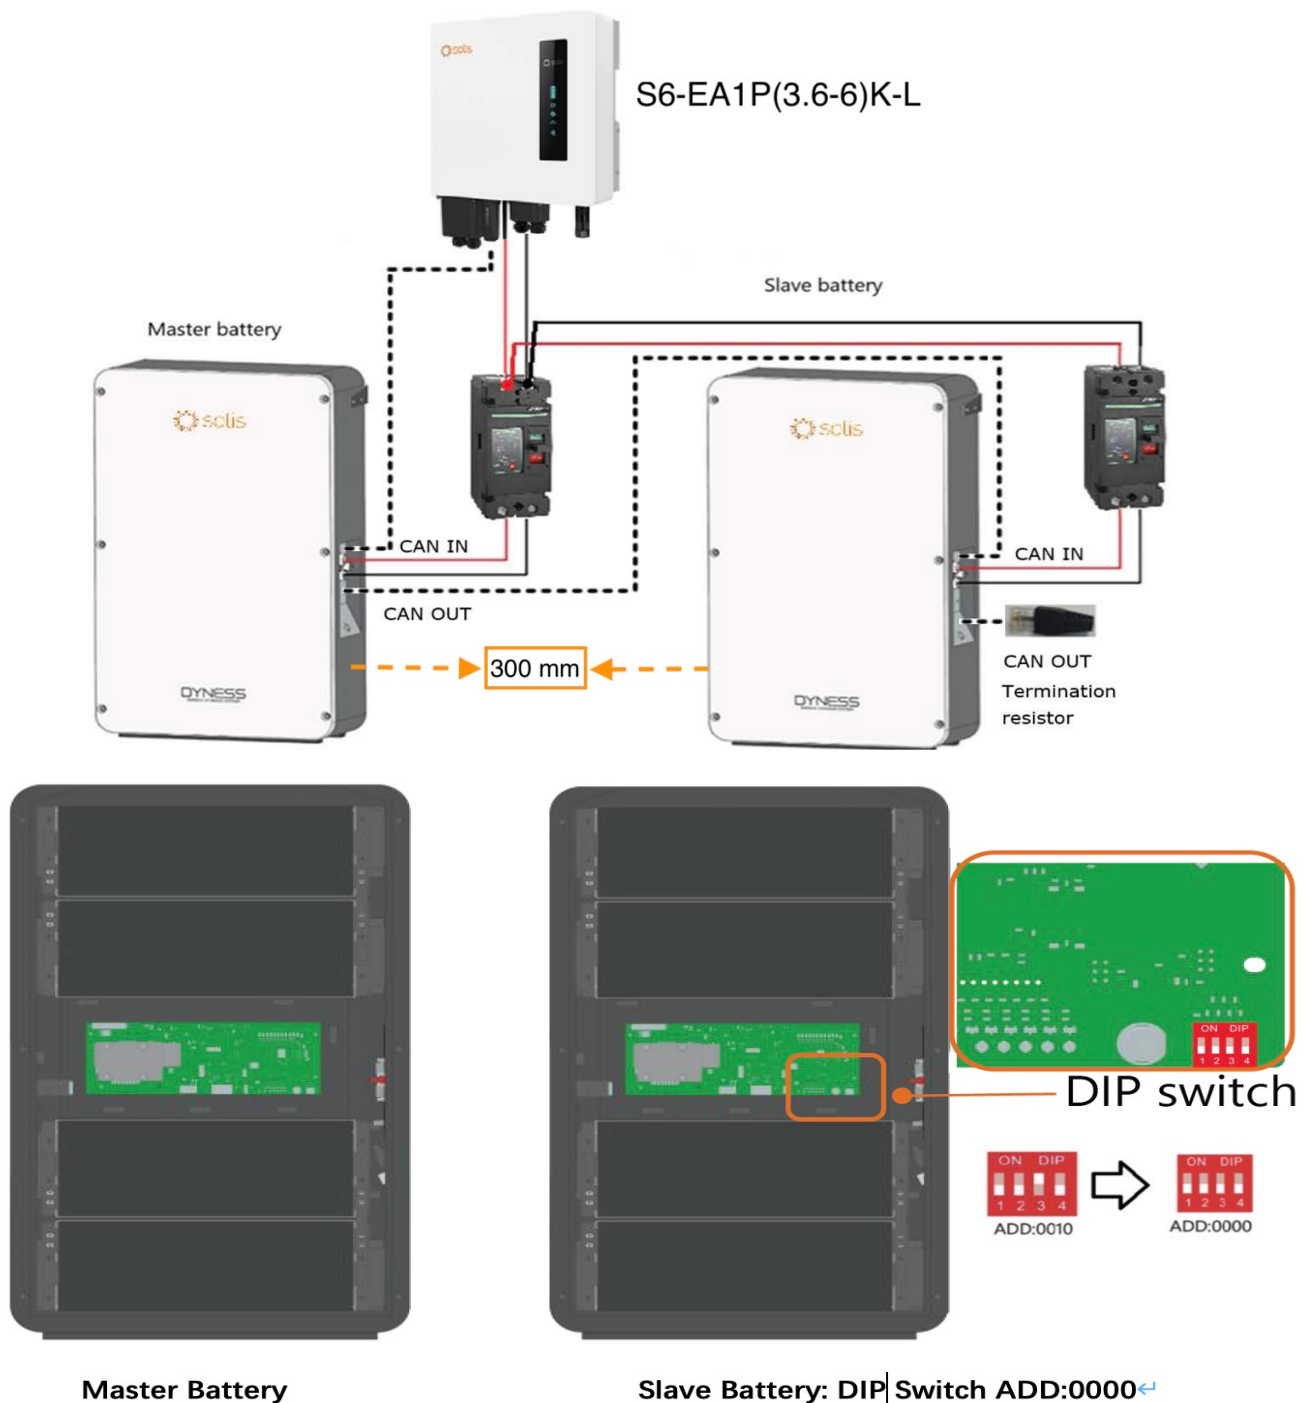

Solis S6-EA1P(3.6-6)K-L Wiring Diagram

Smart Meter Wiring diagram

